


PEDESTRIAN CROSSING - 75mm HIGH

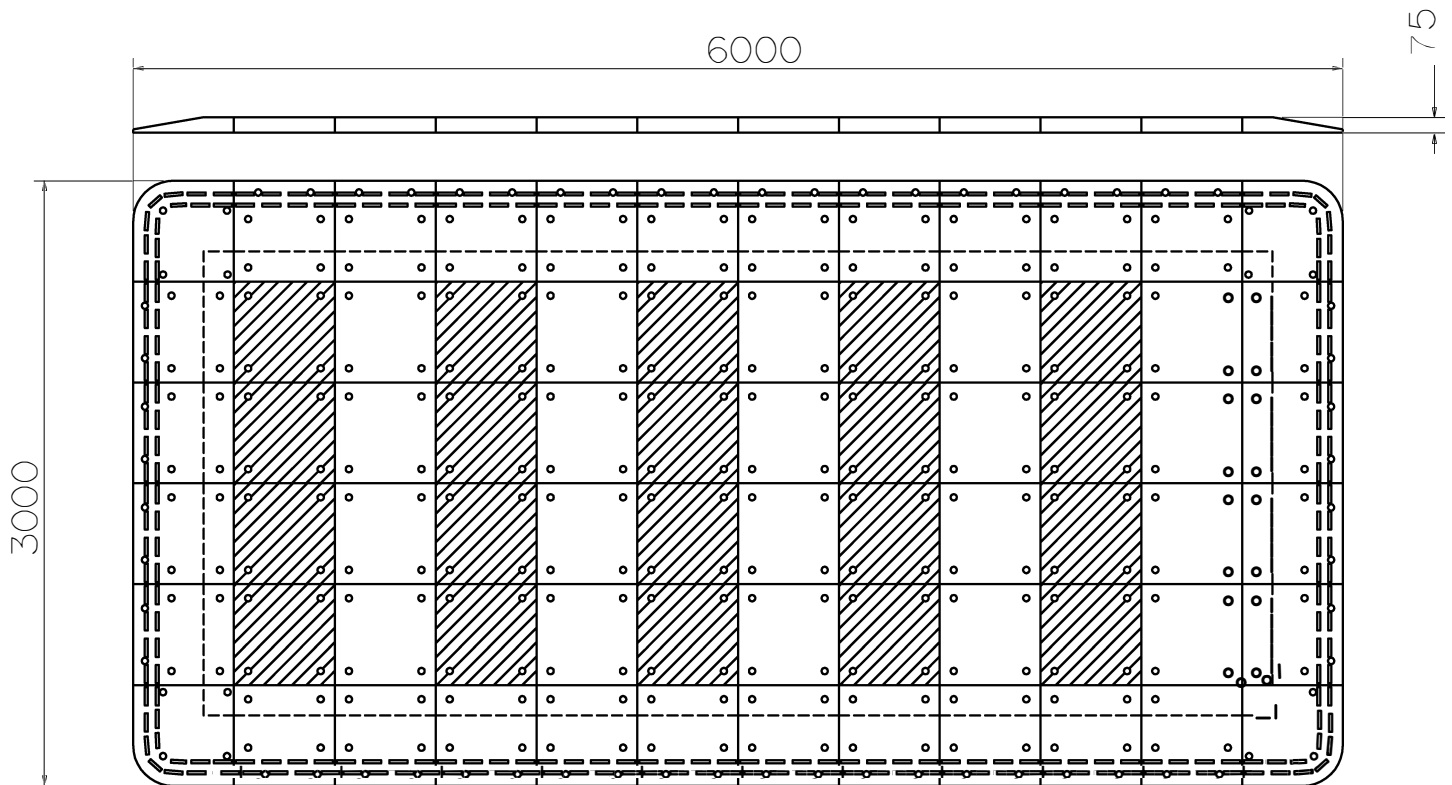

► SPECIFICATIONS

Product	Name	Sizing	Quantity
	Pedestrian Crossing - Middle Part[Black]	500 x 500 x 75mm	20
	Pedestrian Crossing - Middle Part[White]	500 x 500 x 75mm	20
	Pedestrian Crossing - End Part	500 x 500 x 75mm	28
	Pedestrian Crossing - Corner Part	500 x 500 x 75mm	4
	Screw Cap[Black]	30mm dia	284
	Bone Connector		126
	Rebar Spikes	M12 x 300mm	184
	100mm Coach Screw, Nylon Plug & Washer	100mm long	160

REBAR SPIKE - M12 x 300mm


Uses

Fasten wheelstops and economy speed humps to asphalt surfaces.

Instructions

Drill 14mm pilot hole through surface of asphalt. Position product then drive spike through asphalt into base course. Ensure head is driven down tight against top surface.

Code: **49-FR12**

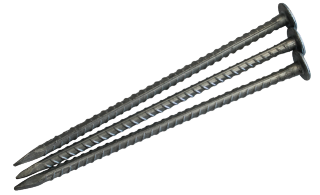

FASTENER KIT - BITUMEN/CONCRETE - 100mm

Includes

M10 x 100 Galv Coach Screw & Washer
M14 x 75 Nylon Plug

Uses

Fasten speed cushions
to asphalt and concrete surfaces.

Instructions

Drill 14mm dia hole into substrate, tap nylon plug into hole. Wind coach screw into place with socket set or impact driver.

Tip: Lubricate Screws with silicon spray before tightening.

Code: **49-FBL**

