
Flexible Bollard

DELINEATION IN LOW-SPEED AREAS

- **Material:** Flexible polyurethane (PU)
- **Construction:** One-piece moulding
- **Colour:** Hi-vis orange
- **Overall height:** 750 or 1000mm
- **Post diameter:** 80mm
- **Base diameter:** 200mm
- **Reflective bands:** 3 per 750mm, 4 per 1000mm
- **Weight:** 1.2kg
- **Mounting**: Surface mount, 3 fixing points
- **Fixings:** 3 fixings per post, not included.

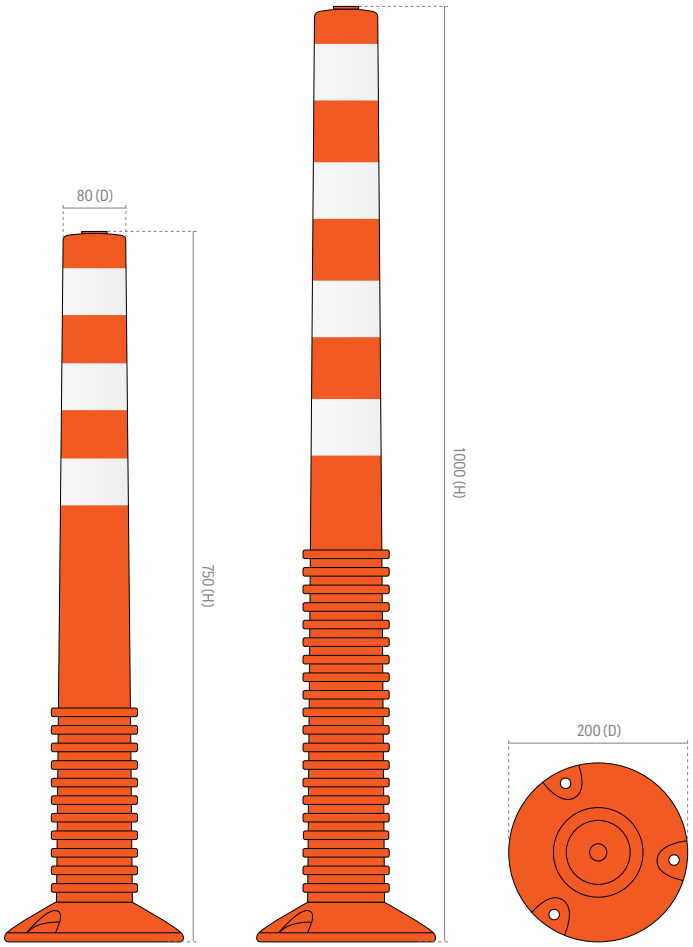

INSTALLATION

Each bollard fixes down through its base with 3 fixings. Pick the fixing to suit the surface.

Onto Asphalt/Bitumen:

- Position the bollard and mark the 3 fixing holes.
- Drill a 14mm diameter x 75mm deep hole at each mark.
- Tap a nylon plug into each hole.
- Wind the coach screws in through the base until firm. Don't over-tighten.

Onto Concrete:

- Position the bollard and mark the 3 fixing holes.
- Drill a 12mm diameter x 100mm deep hole at each mark.
- Clear the dust from each hole.
- Insert the Anka Screws through the base and tighten.

OPTIONS

Code	Description	Size (mm)	Colour
1410-009	One-Piece Flexible Bollard	750mm(H) x 80(D)	Orange
1410-037	One-Piece Flexible Bollard	1000mm(H) x 80(D)	Orange
	Fixings		
1911-063	Bitumen/Asphalt	M10 x 75mm coach screw & nylon plug	
1911-035	Concrete	M10 x 75mm Anka Screw	

VIEW ONLINE